



RHC-DE110
IH 電飯煲
IH Rice Cooker



僅供家庭使用
For household use only

使用說明書

OPERATION MANUAL

- 在使用本產品前，請仔細閱讀此說明書，閱讀後小心收藏保存，以備日後查閱。
Please read the operation manual carefully before using. Keep it in a safe place for future reference.
- 本說明書中的圖示可能與實物有不同的地方，僅供參考。
The images in the operation manual may not match with the real object and are for reference only.

非常感謝您選購樂信牌IH電飯煲，使用前請先詳細閱讀本說明書，並保存以備日後參考。



目錄

1. 安全注意事項
2. 清潔及儲存
3. 產品規格
4. 產品說明
5. 使用方法
6. 故障排除
7. 特別聲明
8. 售後服務

1. 安全注意事項

使用本產品時，必須遵守下列安全措施：











下圖表示由於錯誤操作而引起不同程度的危險等級。

| | |
|---|--|
|  警告 此標誌表示可能造成傷亡。 |  注意 此標誌表示可能造成傷害或財物損失。 |
|---|--|







以下不同標誌區分各種必須遵守的指示。

| | |
|--|--|
|  此標誌表示 禁止。 |  此標誌表示 必須遵守。 |
|--|--|











警告

-  為免危險，產品只適用於本說明書所註明的用途。切勿將產品或任何部份在室外使用或作其他用途使用。如錯誤操作，可造成傷害。
-  切勿讓兒童清潔及保養產品，除非兒童是年齡在8歲以上及監督的情況下。監督兒童不可將產品當作玩具。將產品及其電線放於八歲以下兒童不能接觸的地方。
-  切勿使用變形的內鍋以免引致故障。
-  使用前，確保電源線兩端的插頭已分別插穩在產品及電源插座上。
-  切勿讓產品在無人看管下或沒有內鍋或食物時運作。
-  切勿以其他物品代替原裝內鍋，以免造成危險。
-  產品使用後必須清潔。切勿把產品、主體插口、電源線或插頭浸入水中；或被水濺濕，以免造成觸電及火災。
-  手濕時切勿接觸、插入或拔除插頭，否則可構成觸電的危險。
-  使用時或剛使用後，切勿將臉或手靠近煲蓋及蒸氣口，以免造成燙傷；切勿觸摸剛使用後的加熱部件表面及內鍋，因仍有餘熱。
-  此產品只可作家庭使用及類似環境使用，如商戶內部、辦事處和其他工作環境的員工廚房區域；旅館、汽車旅館和其他住宿類型的環境。











警告

-  切勿將產品放置在容易受電磁場影響的裝置附近或帶磁石物件靠近產品。
-  切勿用任何東西阻擋蒸氣閥組件，否則可能令食材噴出、產品損壞及造成危險。
-  切勿擅自改裝本產品或使用非生產商提供的零件進行修理，否則可造成危險及維修保養無效。
-  只可使用規格為10安培或以上及220伏特交流電的電源插座。
-  此產品可供年齡在8歲或以上的兒童及體質、感覺或智力有障礙人士或缺乏經驗和相關知識的人士使用，但他們必須曾接受負責安全人士的監督或指導如何安全地使用產品和理解所涉及的危險。
-  經常檢查本產品、內鍋、電源線及插頭，如有損壞，為避免危險，立即停止使用，並聯絡信興電器服務中心有限公司安排檢查及維修。

注意


-  切勿使用任何物件遮蓋產品表面、吸氣口及排氣口，以免造成產品故障、變形或變色。
-  使用時，切勿打開上蓋、移動或搖晃產品，以免造成危險。
-  切勿在吸氣口、排氣口或隙縫間插入任何物件，否則可能會導致觸電或因操作故障導致受傷。
-  定期檢查及清潔產品、吸氣口、排氣口及插頭，並清除所有灰塵，以免造成產品故障。
-  切勿在狹小空間使用產品，以免因蒸氣熱度，而導致控制面板、插頭及產品損壞及變色。
-  使用時及移動時，切勿觸碰開蓋按鈕，避免導致意外打開上蓋而導致燙傷及造成危險。
-  使用時或剛使用後，切勿觸摸內鍋把手，要使用隔熱手套，避免造成燙傷。
-  為了維持產品的功能與性能，產品中設有排氣口及吸氣口，但偶爾會有昆蟲等進入排氣口及吸氣口，使產品發生故障。請注意清潔。
-  在插入或拔除插頭時，用手握穩插頭本身，不要抓住電源線。
-  切勿在電源線上放重物、夾住、改裝、用力拉扯或扭曲電源線。

注意

-  切勿用明火加熱或空燒內鍋，否則會損壞內鍋。
-  使用前，確定內鍋外部及產品內部表面清潔乾爽，否則可能引致故障。
-  切勿使用內鍋直接淘米及烹調酸性或鹼性的食物，並使用附件的飯勺及湯勺，以免損害內鍋表面的塗層。
-  煮食份量不可超過內鍋內最高水位線，否則可能有水從蒸氣口噴出。
-  切勿於產品內使用金屬蒸籠架、金屬筷子或任何金屬物品，因這些物品有可能導致觸電及造成危險。
-  如果你佩帶心臟起搏器或去顫器人士，請諮詢醫生。因為本產品的使用可能會影響心臟起搏器及去顫器運作。
-  切勿在電源線纏結的情況下使用或將電源線懸掛在桌子、櫥櫃的邊緣或讓它接觸灼熱的表面，否則可能造成電源線的損壞。
-  切勿在以下環境使用產品：
 - 潮濕或近水的環境；
 - 被陽光直接照射或靠近熱源或高溫的環境如焗爐附近；
 - 在不平穩的表面上；
 - 易燃物料或不耐熱物品附近(如枱布、窗簾及毛巾等)；
 - 靠近帶磁石物件；
 - 導磁物品上(如鋁板等)。
-  切勿使用有殘缺或鬆動的插座。使用前，確保機身插口及電源插頭已充分擦乾。
-  使用後，從電源插座拔出插頭及待產品冷卻後才移動、清潔或檢查產品。


2. 清潔及儲存

1. 清潔前，必須拔除電源插頭，並待產品完全冷卻。
2. 清洗內鍋和內蓋時，使用海綿等軟性物料及清潔劑，用水沖洗後再抹乾及裝回原位。

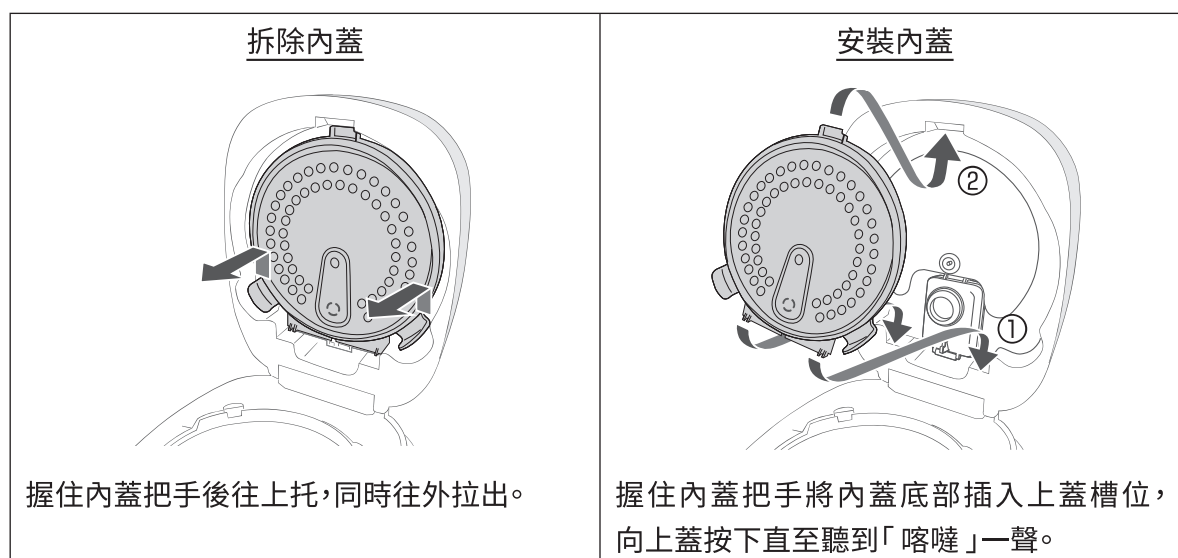

提示: 如果沒有安裝或未能正確安裝時，不能關上上蓋。

3. 清潔蒸氣閥組件時，用水沖洗後再抹乾及裝回原位。

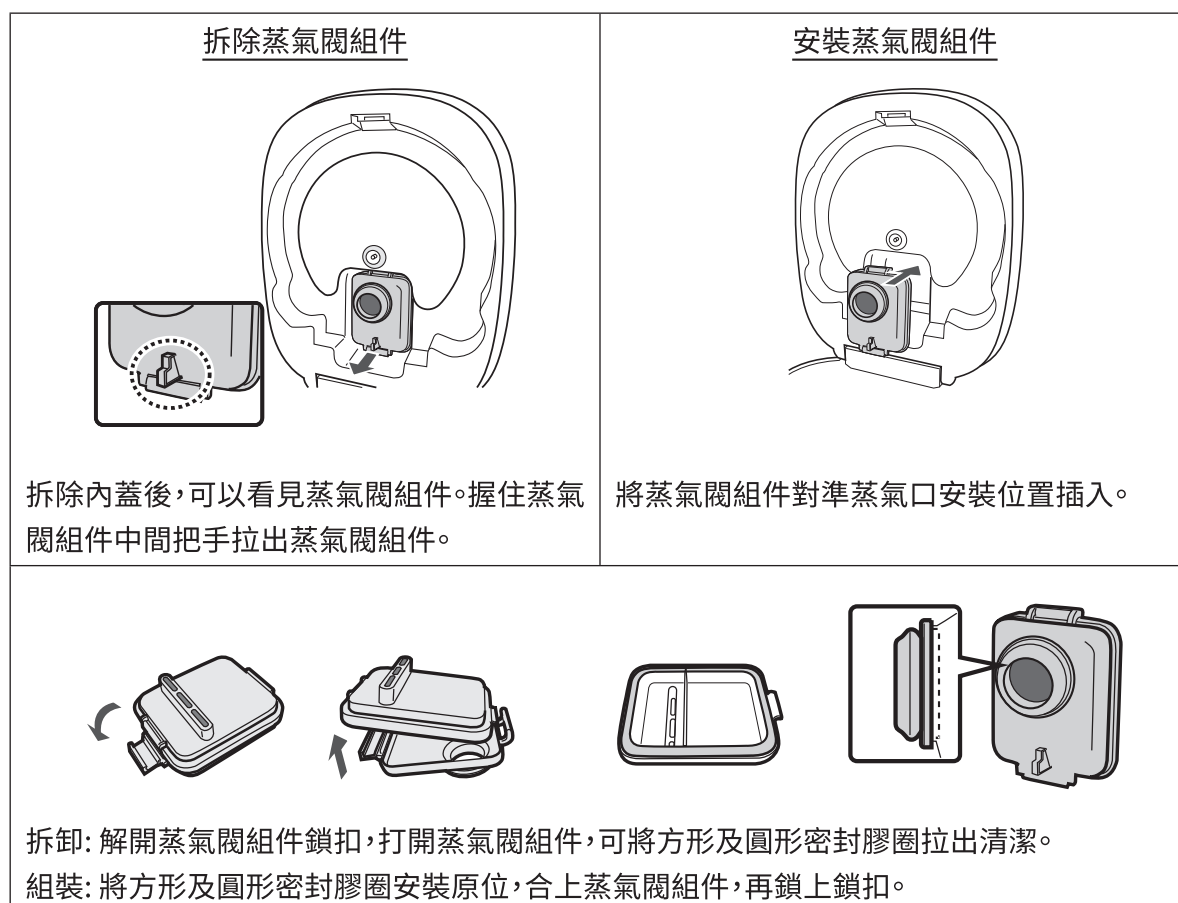


4. 如有食物黏在內鍋，清洗前可用水浸泡一會。
5. 如產品內部表面、機身或上蓋有污穢，可用濕布抹淨，再用乾布抹乾。
6. 為免損壞內鍋塗層，切勿使用金屬餐具或在內鍋中切割食物。
7. 切勿使用有毒或含腐蝕性的清潔劑或粗硬的潔具(如鋼絲刷)進行清潔。
8. 長時間使用後，內鍋表面可能會變色，此乃正常現象並不會影響食物安全及內鍋的使用。
9. 儲存時，請將產品放入紙箱並放置在乾爽的環境中。
10. 儲存時，切勿將電源線纏繞在產品四周或壓住電源線，以免造成電源線損壞。

3. 產品規格

| | |
|----------------------|-------------------------------|
| 型號 | RHC-DE110 |
| 額定電壓 | 220-240伏特~ 50-60赫茲 |
| 額定功率 | 1100瓦 |
| 容量 (約) | 1.0 升 |
| 煮米量(約) | 白米 1 - 5.5 杯 / 粥 0.5 - 0.75 杯 |
| 淨重 (約) | 4.5 公斤 |
| 產品尺寸 (闊 x 深 x 高) (約) | 281 x 352 x 220毫米 |

4. 產品說明


4.1 各部件的名稱和配件

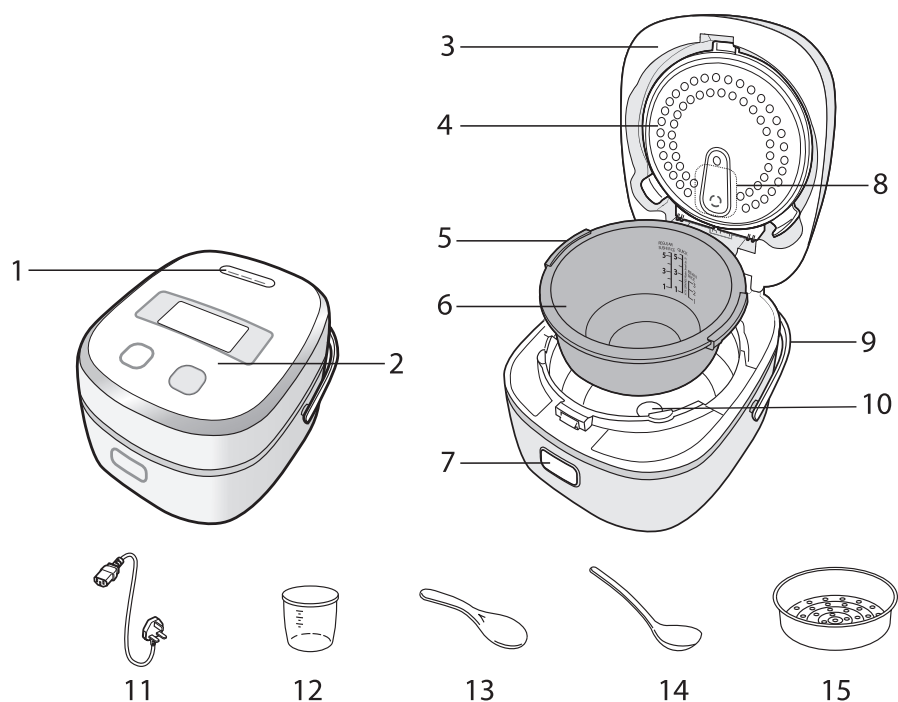

- | | | |
|---------|-----------|---------|
| 1. 蒸氣口 | 6. 內鍋 | 11. 電源線 |
| 2. 控制面板 | 7. 開蓋按鈕 | 12. 量杯 |
| 3. 上蓋 | 8. 蒸氣閥組件 | 13. 飯勺 |
| 4. 內蓋 | 9. 手柄 | 14. 湯勺 |
| 5. 內鍋把手 | 10. 內鍋感應器 | 15. 蒸籠 |

4.2 控制面板

- a. 顯示屏
- b. 功能鍵
- c. 小時鍵
- d. 保溫指示燈
- e. 保溫/取消鍵
- f. 開始鍵
- g. 分鐘鍵
- h. 預約鍵
- i. 預約指示燈

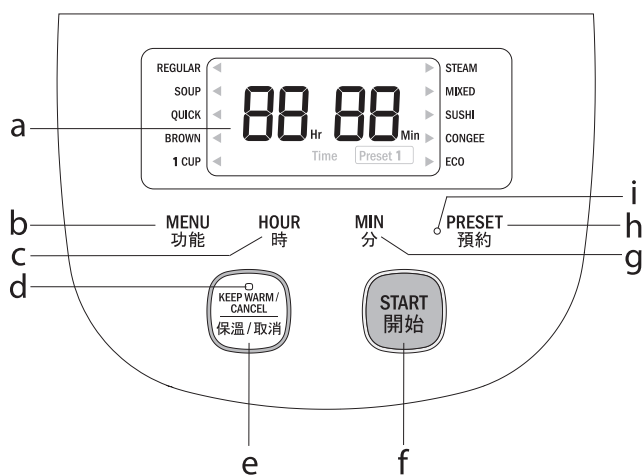

5. 使用方法

5.1 時鐘設定

此產品是24小時制式。

1. 在指定程序*的待機狀態下，按【時】鍵或【分】鍵約2秒，時間值會閃動。按【時】鍵及【分】鍵可調整時間，每次調整分別為1小時及1分鐘，長按【時】鍵及【分】鍵可快速調時間。


* 指定程序: REGULAR, QUICK, BROWN, 1 CUP, MIXED, ECO。

2. 設定時鐘後，時鐘數字閃動5秒，則自動確認及開始運作。
3. 在室溫下，時鐘時間每個月的誤差大約為2分鐘。可按照上述步驟，調整目前時間設定。
4. 在鋰電池電量不足時，拔掉電源插頭將導致遺失資料，例如目前時間及預約設定。
5. 若要更換鋰電池，須聯絡信興電器服務中心有限公司安排。

5.2 煮飯


1. 按【開蓋按鈕】打開上蓋。
2. 將米和水加入內鍋中。注意米和水的份量過多或過少有機會導致食物煮不熟、煮焦、溢出及損壞產品。各煮飯功能的可烹煮份量(米+水)達至水位線可參考下表:

| 程序 | 最少份量 (米量 / 水位線) | 最多份量 (米量 / 水位線) |
|--------------|--------------------|---------------------|
| REGULAR (標準) | 1 杯米 / REGULAR 1 | 5.5杯米 / REGULAR 5.5 |
| QUICK (快煮) | 1 杯米 / QUICK 1 | 5.5杯米 / QUICK 5.5 |
| BROWN (糙米) | 1 杯米 / BROWN 1 | 3杯米 / BROWN 3 |
| 1 CUP (精煮) | 1 杯米 / REGULAR 1 | |
| MIXED (什錦米) | 1 杯米 / QUICK 1 | 3杯米 / QUICK 3 |
| SUSHI (壽司米) | 1 杯米 / SUSHI 1 | 5.5杯米 / SUSHI 5.5 |
| ECO (能效模式) | 1 杯米 / REGULAR 1 | 5.5杯米 / REGULAR 5.5 |

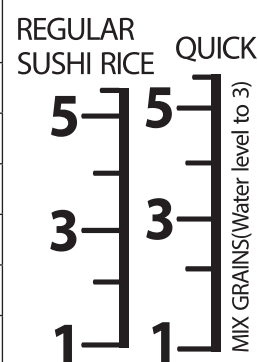


提示: a. 須使用原裝量杯量米，1平杯約180毫升。



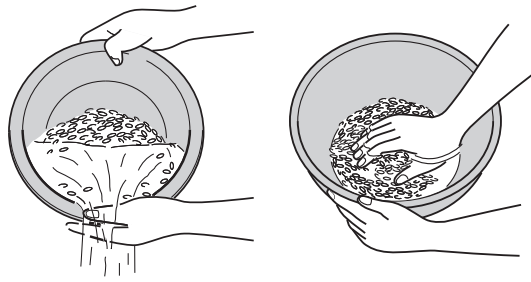

- b. 切勿在內鍋直接洗米，避免磨損內鍋塗層。
 - c. 用戶可按個人口感的喜好適量地調節水量。
 - d. 切勿用熱水煮飯，否則會影響溫控器的運作及米飯的口感。
 - e. 確保內鍋中的米要均勻分佈及內鍋在平面上然後檢查兩側的水位位置。
 - f. 米飯的軟硬會因米量、水量及米質的不同而影響，並有可能形成鍋巴。
 - g. ECO設定是以更有能效的程序煮飯，令煮飯時間縮短。
3. 內鍋放入主體前，確保內鍋外側及底部已抹乾和清潔；如有異物，應立刻清除，否則煮食時會有雜聲及可能造成故障。確保內鍋把手正確放在主體的把手位置上。

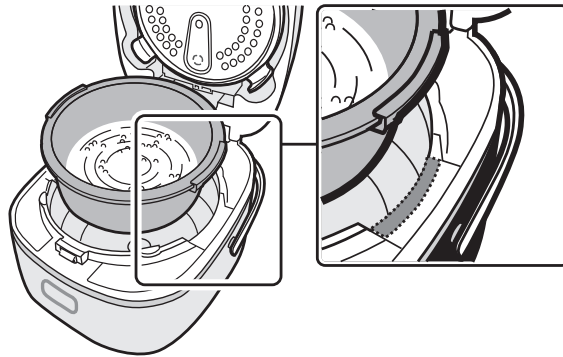

- 4. 檢查蒸氣閥組件及內蓋已裝好。
- 5. 關好上蓋，直至聽到“喀噠”一聲。
- 6. 插入電源插頭。先將主體插頭插入主體插口，再連接至電源插頭。須確保兩個插頭已連接穩妥。
- 7. 按【功能】鍵設定直至箭咀指向所選功能。

| 程序 | 烹調時間 (約) | 保溫 | 預約 | 記憶功能 |
|--------------|-------------|----|----|------|
| REGULAR (標準) | 49 Min (分鐘) | ○ | ○ | ○ |
| QUICK (快煮) | 33 Min (分鐘) | ○ | X | ○ |
| BROWN (糙米) | 70 Min (分鐘) | ○ | ○ | ○ |
| 1 CUP (精煮) | 57 Min (分鐘) | ○ | ○ | ○ |
| MIXED (什錦米) | 53 Min (分鐘) | ○ | X | X |
| SUSHI (壽司米) | 46 Min (分鐘) | ○ | ○ | X |
| ECO (能效模式) | 35 Min (分鐘) | ○ | ○ | ○ |

8. 按【開始】鍵啟動功能，開始指示燈轉為長亮。
9. 完成烹調後，產品會發出提示聲。開始指示燈會熄滅，保溫指示燈會亮起，顯示窗會顯示累計保溫時間，是以1小時單位顯示。轉保溫後，可讓米飯在產品內蒸焗10-15分鐘，米飯會更鬆軟可口。
10. 使用後，按【保溫/取消】鍵回到待機狀態，並拔出電源插頭。

提示: a. 烹調的實際時間會根據米量、水量、電壓、室溫、水溫及米質的不同而變化。

- b. 使用了記憶功能的煮食程序後，產品會儲存該程序為待機狀態的預設功能，按【保溫/取消】鍵取消設定或重新啟動產品時，會顯示記憶的煮食程序。如使用沒有記憶的煮食程序後，按【保溫/取消】鍵取消設定或重新啟動產品時，會顯示最近使用記憶功能的煮食程序。


5.3 湯、蒸煮及粥

1. 按【開蓋按鈕】打開上蓋。
2. 將食材和水加入內鍋中。注意食材和水的份量過多或過少有機會導致食物煮不熟、煮焦、溢出及損壞產品。湯、蒸煮及粥功能的可烹煮份量(食物+水)達至水位線可參考下表:

| 程序 | 最少份量 (水位線) | 最多份量 (水位線) |
|------------|------------|-------------|
| SOUP (湯) | QUICK 3 | QUICK 5.5 |
| STEAM (蒸煮) | REGULAR 1 | REGULAR 3 |
| CONGEE (粥) | CONGEE 0.5 | CONGEE 0.75 |

提示: 使用蒸煮功能時，只需在內鍋注入適量的水，將食物放在蒸架上蒸煮。

3. 內鍋放入主體前，確保內鍋外側及底部已抹乾和清潔；如有異物，應立刻清除，否則煮食時會有雜聲及可能造成故障。確保內鍋把手正確放在主體的把手位置上。

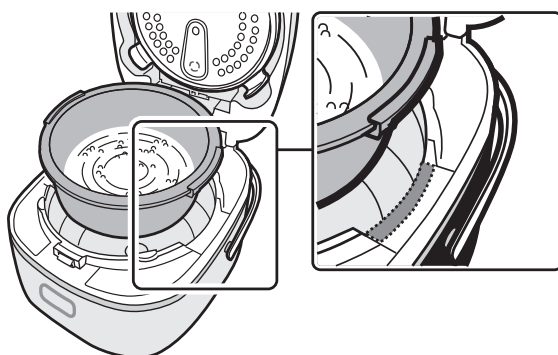

4. 檢查蒸氣閥組件及內蓋已裝好。
5. 關好上蓋，直至聽到「喀噠」一聲。
6. 插入電源插頭。先將主體插頭插入主體插口，再連接至電源插座。須確保兩個插頭已連接穩妥。

7. 按【功能】鍵設定直至箭咀指向所選功能。

「湯」：按【時】鍵及【分】鍵設定烹調時間，每次調整分別為1小時及5分鐘，長按【時】鍵及【分】鍵可快速調時間。

「蒸煮」：按【分】鍵設定烹調時間，每次調整為1分鐘，長按【分】鍵可快速調時間。

「粥」：按【時】鍵及【分】鍵設定烹調時間，每次調整分別為1小時及30分鐘，長按【時】鍵及【分】鍵可快速調時間。

| 程序 | 烹調時間 (約) | 烹調時間設定範圍 | 保溫 | 預約 | 記憶功能 |
|------------|----------------------|----------------|----|----|------|
| SOUP (湯) | 2 Hr 00 Min (2小時) | 1 - 3 Hr (小時) | O | O | O |
| STEAM (蒸煮) | 1 Min (分鐘) | 1- 40 Min (分鐘) | X | X | X |
| CONGEE (粥) | 1 Hr 00 Min (1小時) | 1 - 4 Hr (小時) | O | O | X |

8. 按【開始】鍵啟動功能，開始指示燈轉為長亮。

9. 完成烹調後，產品會發出提示聲，開始指示燈會熄滅。「湯」及「粥」隨即自動轉換至保溫功能，保溫指示燈會亮起，顯示窗會顯示累計保溫時間，是以1小時單位顯示。

10. 使用後，按【保溫/取消】鍵回到待機狀態，並拔出電源插頭。

提示: a. 「湯」、「蒸煮」、「粥」會儲存烹調時間，下次使用時會顯示最近使用的烹調時間。

b. 烹調的實際時間會根據米量、水量、電壓、室溫、水溫及米質的不同而變化。

c. 使用了記憶功能的煮食程序後，產品會儲存該程序為待機狀態的預設功能，按【保溫/取消】鍵取消設定或重新啟動產品時，會顯示記憶的煮食程序。如使用沒有記憶的煮食程序後，按【保溫/取消】鍵取消設定或重新啟動產品時，會顯示最近使用備有記憶的煮食程序。

5.4 取消

操作期間，按【保溫/取消】鍵可將產品回到待機狀態，產品會發出一聲響聲。

5.5 保溫

1. 在待機狀態下，按【保溫/取消】鍵可啟動保溫功能，保溫指示燈會亮起及顯示窗會顯示累計保溫時間，以小時遞增。

2. 保溫時，偶爾將米飯翻鬆及關上上蓋，以免米飯變乾及結塊。

3. 保溫時間最長為24小時，之後產品會自動轉為待機狀態。

4. 切勿將米飯及食物保溫過長時間，否則會產生鍋巴、異味或食物變質。

5. 如取消保溫功能，在保溫狀態下按【保溫/取消】鍵。

5.6 預約功能

此功能可設定產品完成烹調的時間，設定方法如下：

1. 按【功能】鍵設定功能。
2. 按【預約】鍵。
3. 按【時】鍵及【分】鍵設定預約時間，每次調整分別為1小時及10分鐘。長按【時】鍵及【分】鍵可快速調整。如設定完成時間15:00，表示會於下午3時完成烹調。
4. 設定後，按【開始】鍵啟動預約功能，預約指示燈會亮起。如超過2分鐘還沒有按【開始】鍵啟動預約功能，產品會發出提示響聲提示預設還未完成。
5. 產品會處於待機狀態，直至到達預設功能的烹調時間時，才開始烹調。

提示： a. 預約功能是根據產品的24小時時鐘運行。

b. 切勿設定預約功能超過12小時，以免食物變質而產生異味。

c. 預約時間必須多於設定功能的烹調時間，否則產品會立即啟動。例如：現在時間為12:00，預約13:00完成壽司米功能，按【開始】鍵後，產品不會立即啟動。但若果預約13:00完成糙米功能，按【開始】鍵後，產品會立即啟動。

d. 可設定2個預約功能(Preset 1及Preset 2)，按【預約】鍵可切轉使用。

6. 故障排除

| 故障現象 | 原因 | 解決方法 |
|----------------------------|------------------|--|
| 顯示窗顯示U1。 | 未有放入內鍋。 | 按【保溫/取消】鍵停止運作，放入內鍋後，重新連接電源及啟動產品。 |
| 顯示窗顯示U2、C8及Cb。 | 內部零件溫度過高。 | 按【保溫/取消】鍵停止運作，拔除電源插頭，待產品冷卻後，重新連接電源及啟動產品。 |
| 顯示窗顯示E3。 | 產品在運作時停電。 | 按【保溫/取消】鍵停止運作，拔除電源插頭，待產品冷卻後，重新連接電源及啟動產品。 |
| 顯示窗顯示E4。 | 過了預約功能的時間，才恢復電力。 | 按【保溫/取消】鍵停止運作，拔除電源插頭，待產品冷卻後，重新連接電源及啟動產品。 |
| 顯示窗顯示C1、C2、C4、C5、C9、E1及E2。 | 內部零件損壞。 | 按【保溫/取消】鍵停止運作，並聯絡信興電器服務中心有限公司安排檢查。 |

如使用以上方法仍未能解決故障，立即停止使用，並聯絡信興電器服務中心有限公司進行檢查及維修。

7. 特別聲明

1. 此說明書所有內容經過核對，如有任何印刷錯誤或內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及規格以廠方生產資料為準。
3. 此說明書的電子副本可透過電子郵件發送致客戶。如有需要，請致電信興電工工程有限公司：2861 2767。

8. 售後服務

信興電工工程有限公司（「本公司」）將授權信興電器服務中心有限公司（「服務中心」）（統稱「信興」）提供一年保修服務（並由發票上的日期起計）。非保修期內，客戶須按服務中心的修理服務價目表繳付一切費用。保修詳情請參閱保修卡。

1. 信興對於任何因產品不適當地使用或任何產品之故障、損壞或停頓而引致任何人士或財產的直接或間接損失及破壞，概不負責。
2. 客戶須自行將產品送往客戶服務中心，並於產品修妥後於同一地點取回。
3. 保修卡（印在包裝盒上）只適用於香港及澳門。於修理時，客戶需出示保修卡及由香港或澳門經銷商發出的正式發票/或換購收據予技術員查閱。保修卡上之產品型號必須與機身相符，保修卡上之購買日期須與正式發票上的日期符合，方為有效。除指定保修卡外，任何商號及人士發出之保修卡，均不為信興認可。
4. 客戶不可擅自更改產品上的機身編號，如發現產品上的機身編號與保修卡所列者不符，保修卡則告無效。（如適用）
5. 除產品表面、機殼、損耗性零件及附件外，產品如發生故障，經服務中心證實乃在正常使用情況下發生者，服務中心將提供免費修理及更換零件，經更換後之任何損壞零件，將歸服務中心所有。
6. 下列項目並不包括於保修範圍內。客戶須另付所需的服務費用。（甲）修理或更換產品之附件、外觀及損耗性零件，包括但不限於外接線、機殼、面板、面板貼紙等。（乙）曾被非服務中心的技術員明顯地或不明顯地進行改裝、更改或修理的產品。（丙）曾經被不適當或疏忽使用、不正常供電或電壓不正常、意外、天災或因昆蟲、外物、液體入侵、腐蝕或外來因素而造成損壞的產品。（丁）因產品不正確安裝而影響正常之操作。
7. 如中英文版本有差異時，應以中文版為準。
8. 所有資料如有任何更改，恕不另行通知。如有任何爭議，服務中心保留最終決定權。
9. 保修卡沒有賦予或意圖賦予任何第三者因《合約（第三者權利）條例》（第623章）所列之任何利益或權利以強制執行保修卡的任何條款內容。

Thank you for choosing Rasonic IH rice cooker. Please read the operation manual carefully before use and keep it for your future reference.

Table of Contents



1. Important Safeguards
2. Cleaning and Storage
3. Product Specifications
4. Product Descriptions
5. Operation Instructions
6. Troubleshooting
7. Special Avowal
8. After Sales Service

1. Important Safeguards









When using the appliance, please follow the below safety precautions:
The following chart indicates the degree of damage caused by wrong operation

| | |
|--|--|
|  WARNING Indicates that may cause death or severe injury. |  CAUTION Indicates hazards that may cause human injuries or property damages. |
|--|--|

The following symbols can distinguish the instruction types that need to be strictly followed.

| | |
|--|--|
|  <p>These symbols mean prohibition.</p> |  <p>These symbols mean requirement that must be followed.</p> |
|--|--|

WARNING

- | | |
|--|---|
| <p> To avoid danger, use the appliance only as described in the operation manual. Do not use it or any part of the appliance outdoors or out of the intended purpose. Misuse can cause potential injury.</p> | <p> Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Children being supervised not to play with the appliance. Keep put the appliance and its power cord out of reach of children aged less than 8 years.</p> |
| <p> Do not use deformed inner pot to avoid malfunction.</p> | <p> Before use, please make sure both ends of the power cord are plugged in tightly on the appliance and the power socket.</p> |
| <p> Never leave the appliance unattended when in use, operate without inner pot or food inside.</p> | <p> Do not use other things to substitute the original inner pot, or it will cause danger.</p> |
| <p> Clean the appliance after use. Must not immerse the appliance, main body connector, power cord or plug into water or let them wet, it can cause electric shock or fire.</p> | <p> Do not touch, plug in or remove the plug with wet hands, it can cause electric shock.</p> |



WARNING



To avoid burn, do not get your face or hands close to the lid and the steam vent during use or right after use; never touch the heating element surface and inner pot which are subject to residual heat right after use.



The appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; by clients in hotels, motels and other residential type environments.



Do not place the appliance near devices vulnerable to magnetic fields or bring magnets close to the appliance.



Do not put anything to block the steam vent set, or cooking contents may jet out, causing appliance damage and danger.



Do not attempt to modify the appliance by yourself or repair with any unauthorized parts, otherwise it will cause hazards and the warranty will become invalid.



Use only a power outlet rated at 10 Amperes or above and alternating current at 220 Volts.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Always check the condition of the appliance, inner pot, power cord and plug. If any of the parts is damaged, stop using the appliance immediately to avoid hazard and contact Shun Hing Electric Service Centre Limited to check and repair.



CAUTION



Do not cover the appliance surface, intake vent and exhaust vents with any objects, so as not to cause appliance malfunction, deformation or discolor.



Do not open the lid, move or shake the appliance when in use, it can cause danger.



Do not insert any object in the intake vent, exhaust vent or gaps, it may cause electric shock or injury caused by malfunction.



Regularly check and clean the appliance, intake vent, exhaust vent and plug, and clean their dust to avoid the appliance malfunction.



Do not use the appliance in a small space where steam is not confined within a closed space, or it may cause control panel, plug and appliance deformation and discoloration due to the heat of steam.



When use and move the appliance, do not touch the open button, it may cause the lid to open, resulting in a burn and cause danger.



Do not touch the inner pot handle when the appliance is or has recently been in operation. Always wear the oven mitts to avoid getting burns.



To maintain the appliance function and performance, the intake vent and exhaust vent are designed on the appliance. In rare cases, insects may enter these holes and cause a malfunction. Please pay attention to clean.



Grasp the plug itself when plug in or remove the plug, do not grasp the power cord.



Do not place heavy objects on the power cord. Never clip, modify, stretch or twist the power cord.











Do not heat the inner pot with fire or when it is empty, it will cause damage the inner pot.



Make sure the inner pot outer surface and the appliance inside surface are clean and dry before use, or it may cause malfunction.




CAUTION

-  Do not wash rice directly inside the inner pot, cook acidic or alkaline food in the inner pot. Use the supplied rice scoop and soup scoop, so as not to damage the coating of the inner pot.
-  Do not use any metal steamer, chopstick and objects in the appliance. It may cause electric shock and danger.
-  Do not operate the appliance when the power cord is tangled or hangs over the edge of a table, counter-top or let it touch any hot surface, it may damage the power cord.
-  Do not use a deficient or loose socket. Make sure the power connector and plug are dry before use.
-  The cooking amount cannot exceed the maximum water level of the inner pot to prevent spillage from the steam vent.
-  If you wear a cardiac pacemaker or cardiac defibrillator, consult with your doctor. The operation of the appliance may affect the operation of a pacemaker and defibrillator.
-  Do not operate the appliance in the following places:
- Humid environment or near water;
 - Exposed to sunlight, near heat sources or high temperature places such as near an electric oven;
 - Unstable surface;
 - Near flammable or non-resistant to heat objects (e.g. table cloth, curtain and towel etc.);
 - Close to magnets;
 - On magnetically conductive items (such as aluminum sheet).
-  After use, remove the plug and let the appliance completely cool down before moving, cleaning or checking.


2. Cleaning and Storage

1. Before cleaning, must unplug the appliance and let it cool down completely.
2. When clean the inner pot and the inner lid, use a soft material such as sponge and detergent, rinse them and let them dry, then place it back to the original position.

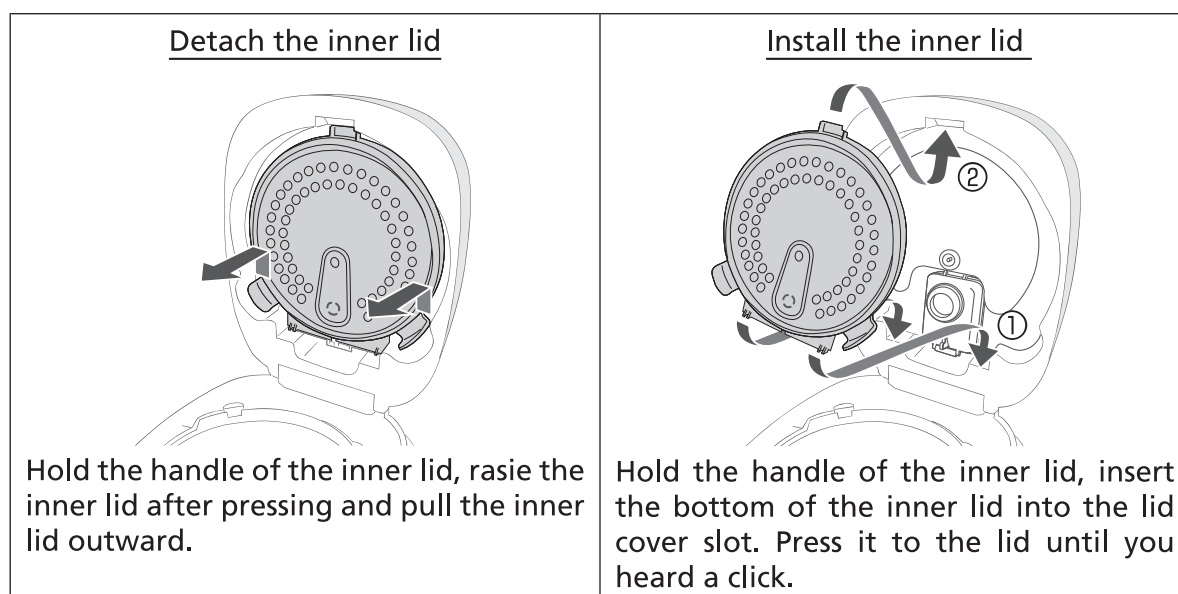

Tips: If the inner lid is not properly installed, the lid cannot be closed.

3. When clean the steam valve set, rinse them and let them dry, then place it back to the original position.

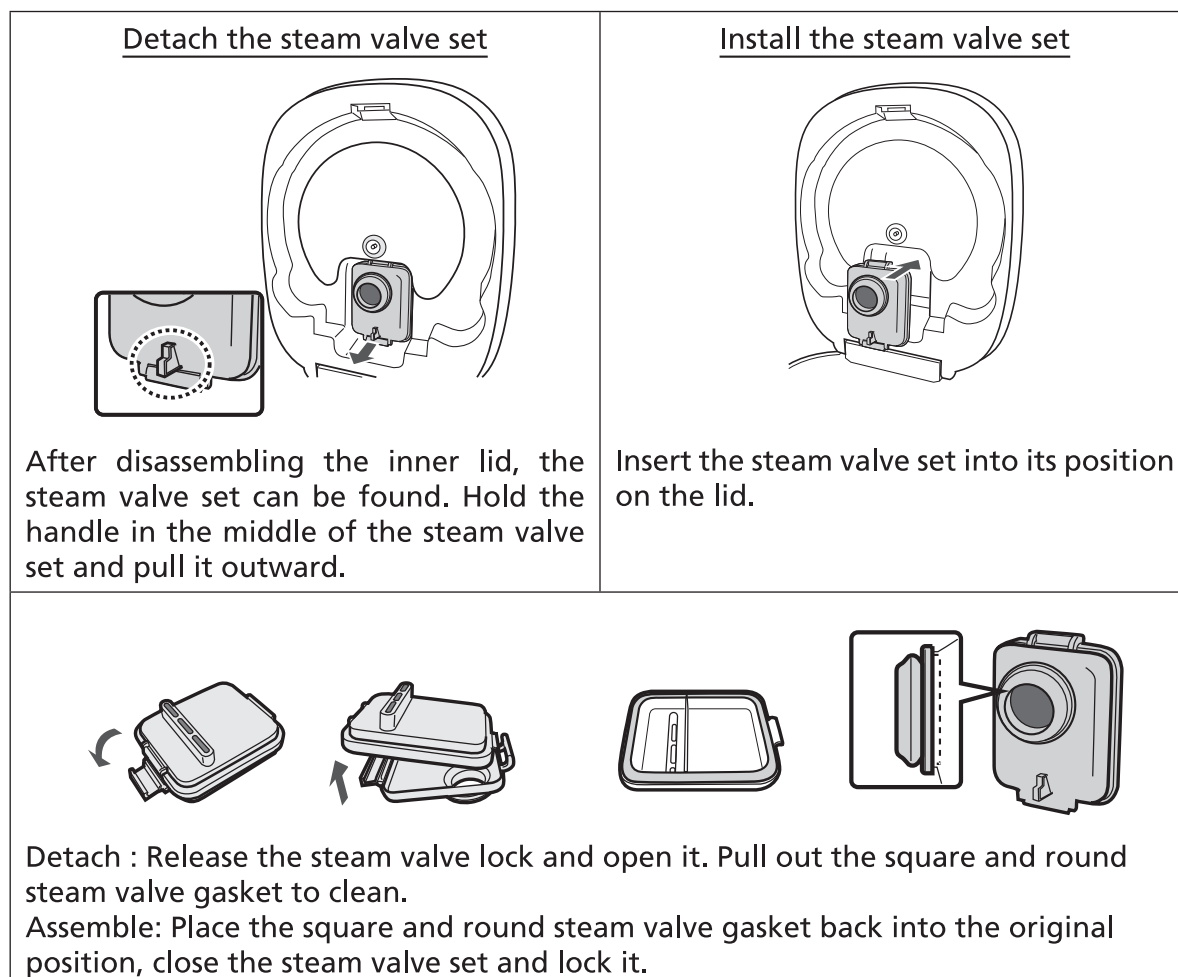


4. If food residual sticks on the inner pot, soak the inner pot with water for a while before cleaning.
5. If dirt is attached on the appliance inside surface, body or lid, use a damp cloth to clean and wipe them dry.
6. To avoid damage on the inner pot coating, never use metal utensils or cut food in the inner pot.
7. Never use poisonous or corrosive detergent, or clean with harsh cleaning tools (e.g. metal-wired brush) for cleaning.
8. The color of inner pot may change after using a period of time, however it does not affect the food safety and function of the inner pot.
9. When store, put the appliance into a box and store in a dry place.
10. When store, never wrap the power cord around the appliance or clip the power cord, it is to prevent the power cord from deterioration.

3. Product Specifications

| | |
|------------------------------------|--|
| Model | RHC-DE110 |
| Rated Voltage | 220-240V~ 50-60Hz |
| Rated Power | 1100W |
| Capacity (Approx.) | 1.0 L |
| Cook rice capacity (Approx.) | Rice 1 - 5.5 cups / Congee 0.5 - 0.75 cups |
| Net Weight (Approx.) | 4.5 kg |
| Product Size (W x D x H) (Approx.) | 281 x 352 x 220mm |

4. Product Descriptions

4.1 Parts Name and Accessories

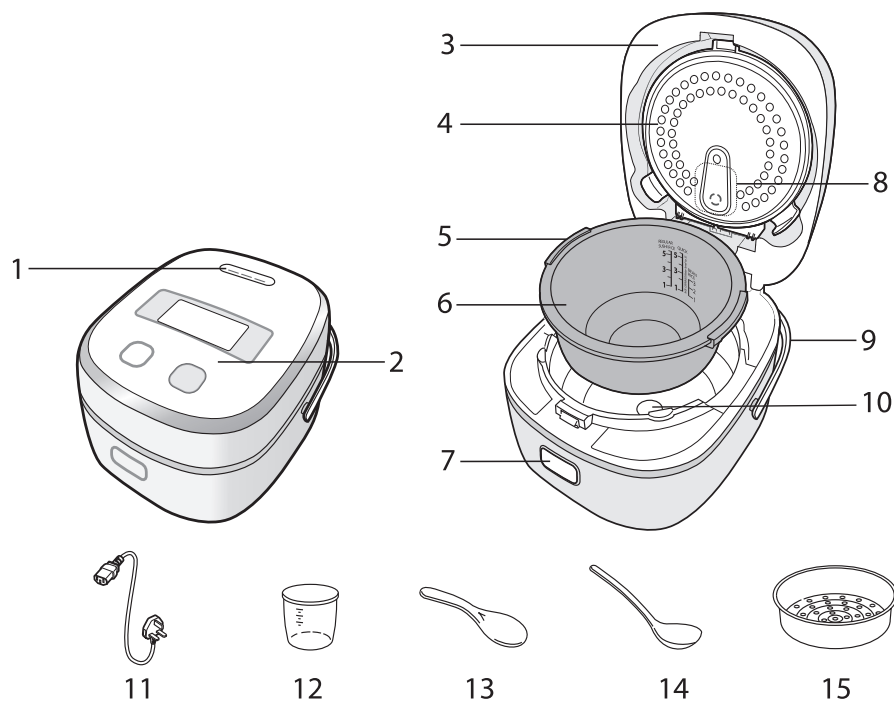


- 1. Steam vent
- 2. Control panel
- 3. Lid
- 4. Inner lid
- 5. Inner pot handle

- 6. Inner pot
- 7. Open button
- 8. Steam valve set
- 9. Handle
- 10. Pan sensor

- 11. Power cord
- 12. Measuring cup
- 13. Rice scoop
- 14. Soup scoop
- 15. Steaming basket

4.2 Control Panel

- a. Display screen
- b. MENU key
- c. HOUR key
- d. Keep warm indicator
- e. KEEP WARM / CANCEL key
- f. START key
- g. MIN key
- h. PRESET key
- i. Preset indicator

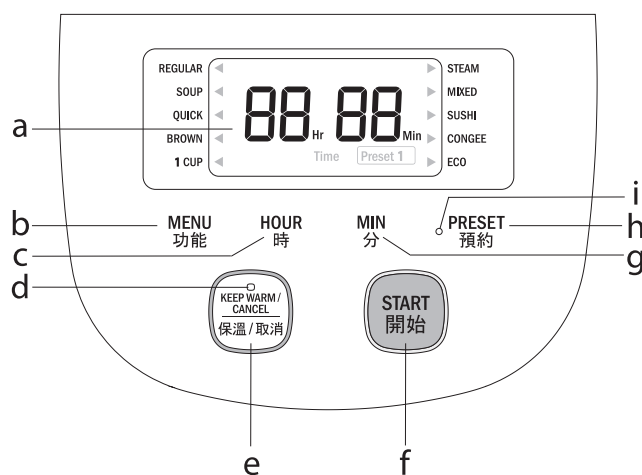

5. Operation Instructions

5.1 Clock Setting


The appliance is displayed in 24-hour clock format.

1. In the standby status of some specific programs*, press 【 HOUR 】 key or 【 MIN 】 key for around 2 seconds, the time digit flashes. Press 【 HOUR 】 key and 【 MIN 】 key to adjust the time. Each adjustment is 1 hour and 1 minute respectively. Press and hold 【 HOUR 】 key and 【 MIN 】 key to adjust the time quickly.
* Specific program : REGULAR, QUICK, BROWN, 1 CUP, MIXED, ECO.
2. After set, the time digit will flash 5 seconds, then the clock will confirm automatically and start to run.
3. At room temperature the clock time will show an error of approximately 2 minutes after one month. Use the above procedure to adjust the current time setting.
4. When the lithium battery runs down, removing the power plug will result in the loss of stored data such as the current time and completion timer setting.
5. For a replacement of lithium battery, must contact Shun Hing Electric Service Centre Ltd. to arrange.

5.2 Rice Cooking


1. Press 【 Open button 】 to open the lid.
2. Pour rice and water into the inner pot. Beware the amount of food and water, exceed or less than the suggested amount may result undercook, overcook, overflow and damaged the appliance. The cooking amount (rice + water) of rice cooking function can reach the water level refer to the following table:

| Program | Min. amount (rice / water level) | Max. amount (rice / water level) |
|---------|-------------------------------------|-------------------------------------|
| REGULAR | 1 cup / REGULAR 1 | 5.5 cups / REGULAR 5.5 |
| QUICK | 1 cup / QUICK 1 | 5.5 cups / QUICK 5.5 |
| BROWN | 1 cup / BROWN 1 | 3 cups / BROWN 3 |
| 1 CUP | 1 cup / REGULAR 1 | |
| MIXED | 1 cup / QUICK 1 | 3 cups / QUICK 3 |
| SUSHI | 1 cup / SUSHI 1 | 5.5 cups / SUSHI 5.5 |
| ECO | 1 cup / REGULAR 1 | 5.5 cups / REGULAR 5.5 |

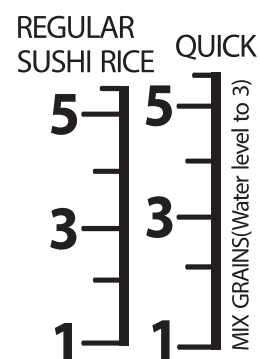


- a. Tips: Must use the supplied measuring cup to measure rice, 1 cup of rice leveled is about 180ml.



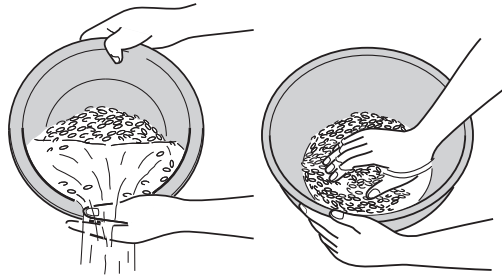

- b. Do not wash rice directly in the inner pot to avoid scratching the coating.
 - c. The water amount can be adjusted according to personal preference on the rice texture.
 - d. Do not cook with hot water, it will affect the thermostat operation and the rice texture.
 - e. Make sure the rice is evenly distributed in the inner pot and ensure that the inner pot is on a level surface and check the water marks on both sides.
 - f. The cooked rice texture is varied with difference rice amount, water volume and rice quality, sometimes it is possible to form crust.
 - g. ECO function is an energy-efficient program for cooking, so as to shorten the cooking time.
3. Before putting the inner pot into the main body, make sure the outer and bottom surface of the inner pot is wiped dry and clean. If foreign substance is attached, please remove it immediately. Otherwise it will cause noise while cooking and possibly a malfunction. Be sure that the handle of inner pot is fit properly into the gap for handle at the main body.

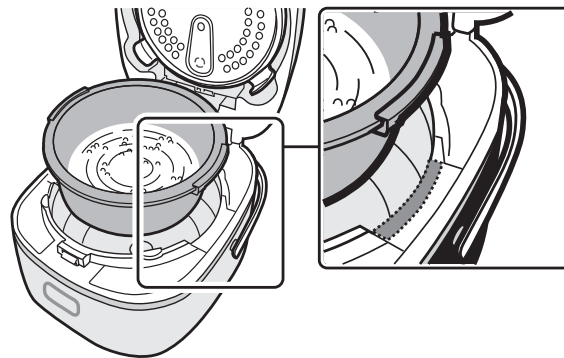

- 4. Check the steam valve set and inner lid have been attached.
- 5. Close the lid until a click sound is heard.
- 6. Plug in the power plugs. Insert the main body plug into the main body connector, then connect to a power outlet. Make sure both ends are connected securely.
- 7. Press [MENU] key to set until the arrow point to the desired function.

| Program | Cooking time (Approx.) | Keep warm | Completion timer | Memory |
|---------|------------------------|-----------|------------------|--------|
| REGULAR | 49 Min | O | O | O |
| QUICK | 33 Min | O | X | O |
| BROWN | 70 Min | O | O | O |
| 1 CUP | 57 Min | O | O | O |
| MIXED | 53 Min | O | X | X |
| SUSHI | 46 Min | O | O | X |
| ECO | 35 Min | O | O | O |

8. Press [START] key to start the function. The start indicator turns on.
9. After cooking, the appliance will have signal sound. The start indicator turns off and the keep warm turns on. The display will show the accumulated keep warm time in hour units. After turned to keep warm status, keep the rice in the rice cooker for 10-15 minutes, the rice would become soft and taste better.
10. After use, press [KEEP WARM / CANCEL] key to return to standby status and unplug from the power socket.

- Tips:
- a. The actual cooking time is varied with different rice amount, water amount, voltage, room and water temperature and rice quality.
 - b. After cook the menu with memory, the appliance will store the program as a preset function for the standby status. When you press [KEEP WARM / CANCEL] key to cancel the setting or reset the appliance, the memorial menu will be displayed. If cook the menu without memory, when you press [KEEP WARM / CANCEL] key to cancel the setting or reset the appliance, the display will show the last memorial menu.


5.3 Soup, Steam and Congee

1. Press [Open button] to open the lid.
2. Pour food and water into the inner pot. Beware the amount of food and water, exceed or less than the suggested amount may result undercook, overcook, overflow and damaged the appliance. The cooking amount (food + water) of soup, steam and congee functions can reach the water level refer to the following table:

| Program | Min. amount (water level) | Max. amount (water level) |
|---------|---------------------------|---------------------------|
| SOUP | QUICK 3 | QUICK 5.5 |
| STEAM | REGULAR 1 | REGULAR 3 |
| CONGEE | CONGEE 0.5 | CONGEE 0.75 |

Tips: When steam, pour the proper amount of water into the inner pot, then put the food onto the steaming basket to cook.

3. Before putting the inner pot into the main body, make sure the outer and bottom surface of the inner pot is wiped dry and clean. If foreign substance is attached, remove it immediately. Otherwise it will cause noise while cooking and possibly a malfunction. Be sure that the handle of inner pot is fit properly into the gap for handle at the main body.

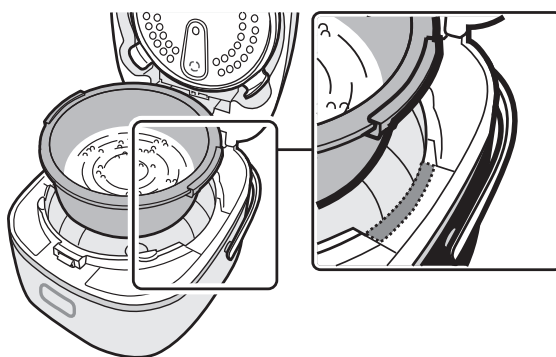

4. Check the steam valve set and inner lid have been well installed.
5. Close the lid until a click sound is heard.

6. Plug in the power plugs. Insert the main body plug into the main body connector, then connect to a power outlet. Make sure both ends are connected securely.
7. Press [MENU] key to set until the arrow point to the desired function.

“SOUP” :Press [HOUR] key and [MIN] key to set the cooking time. Each adjustment is 1 hour and 5 minutes respectively. Press and hold [HOUR] key and [MIN] key to adjust the time quickly.

“STEAM” :Press [MIN] key to set the cooking time. Each adjustment is 1 minute. Press and hold [MIN] key to adjust the time quickly.

“CONGEE” :Press [HOUR] key and [MIN] key to set the cooking time. Each adjustment is 1 hour and 30 minutes respectively. Press and hold [HOUR] key and [MIN] key to adjust the time quickly.

| Program | Cooking time (Approx.) | Cooking time setting range | Keep warm | Completion timer | Memory |
|---------|------------------------|----------------------------|-----------|------------------|--------|
| SOUP | 2 Hr 00 Min | 1 - 3 Hr | O | O | O |
| STEAM | 1 Min | 1- 40 Min | X | X | X |
| CONGEE | 1 Hr 00 Min | 1 - 4 Hr | O | O | X |

8. Press [START] key to start the function, the start indicator turns on.
9. After cooking, the appliance will have signal sound. The start indicator turns off. “SOUP” and “CONGEE” switch automatically to the keep warm function. The keep warm turns on. The display will show the accumulated keep warm time in hour units.
10. After use, press [KEEP WARM / CANCEL] key to return to standby status and unplug from the power socket.

Tips: a. “SOUP”, “STEAM” and “CONGEE” will store the cooking time setting, the last cooking time will be shown when use the function again.

b. The actual cooking time is varied with different rice amount, water amount, voltage, room and water temperature and rice quality.

c. After cook the menu with memory, the appliance will store the program as a preset function for the standby status. When you press [KEEP WARM / CANCEL] key to cancel the setting or reset the appliance, the memorial menu will be displayed. If cook the menu without memory, when you [KEEP WARM / CANCEL] key to cancel the setting or reset the appliance, the display will show the last memorial menu.

5.4 Cancel

During operation, press [KEEP WARM / CANCEL] key to return to standby status and the appliance will have a signal sound.

5.5 Keep Warm

1. In the standby status, press 【 KEEP WARM / CANCEL 】 key to activate the keep-warm function, the keep-warm indicator turns on, the display screen will show the accumulated keep warm time in hour units.
2. When keeping warm, scarify the rice occasionally and close the lid. It is to avoid the rice becomes dry and clamp.
3. The maximum keep-warm time is 24 hours, after that the appliance will turn to standby status automatically.
4. Do not keep warm the rice and food for too long, otherwise it may have crust, bad smell or deterioration.
5. To cancel the keep warm function, press 【 KEEP WARM / CANCEL 】 key under the keep-warm status.

5.6 Completion Timer

This function is to set the cooking completion time of the appliance, the setting method is as follows:

1. Press 【 MENU 】 key to set the function.
2. Press 【 PRESET 】 key.
3. Press 【 HOUR 】 key or 【 MIN 】 key to set the completion timer. Each adjustment is 1 hour and 10 minutes respectively. Press and hold 【 HOUR 】 key and 【 MIN 】 key to adjust the time quickly. If set the completion timer is at 15:00. It means the cooking will be finished at 3pm.
4. After set, press 【 START 】 key to activate the completion timer, the preset indicator turns on. If 【 START 】 key does not press to activate the completion timer for more than 2 minutes, the appliance will have signal sound to remind the setting has not yet completed.
5. The appliance will be in the standby status and start to cook until it reaches to the cooking time of the set function.

- Tips:
- a. The completion timer runs according to the appliance's 24-hour clock.
 - b. Do not set the completion timer over 12 hours to avoid food deterioration and bad smell.
 - c. The completion timer must be more than the cooking time of the set function. Otherwise the appliance will start the function immediately. For example, the current time is 12:00, if set the completion timer for SUSHI at 13:00, once press 【 START 】 key, the appliance will not start to cook immediately. But if set the completion timer for MIXED at 13:00, once press 【 START 】 key, the appliance will start to cook immediately.
 - d. Two completion timer (Preset 1 & Preset 2) can be set. Press 【 PRESET 】 key can switch to use.

6. Troubleshooting

| Problem | Cause | Solution |
|--|---|--|
| Display shows U1. | No inner pot in the appliance. | Press 【 KEEP WARM/CANCEL 】 key to stop the operation, put the inner pot into the appliance, then reconnect the power and reset the appliance. |
| Display shows U2, C8 and Cb. | The temperature of internal parts is too high. | Press 【 KEEP WARM/CANCEL 】 key to stop the operation, unplug the appliance. Wait for the appliance to cool down, then reconnect the power and reset the appliance. |
| Display shows E3. | Power outage during operation. | Press 【 KEEP WARM/CANCEL 】 key to stop the operation, unplug the appliance. Wait for the appliance to cool down, then reconnect the power and reset the appliance. |
| Display shows E4. | The power is restored after the time to start the completion timer. | Press 【 KEEP WARM/CANCEL 】 key to stop the operation, unplug the appliance. Wait for the appliance to cool down, then reconnect the power and reset the appliance. |
| Display shows C1, C2, C4, C5, C9, E1 and E2. | The internal parts are damaged. | Press 【 KEEP WARM/CANCEL 】 key to stop the operation and contact Shun Hing Electric Service Centre Ltd to check. |

If the above solutions cannot fix the problem, stop using immediately and contact Shun Hing Electric Service Centre Ltd to check and repair.

7. Special Avowal

1. The content in the operation manual has been checked. Our company reserves the hermeneutic power to any printing errors or misunderstanding on the content.
2. If there are technical improvements on the appliance, the operation manual will be updated in new version without prior notice. The product appearance and specification are subject to the manufacturer information.
3. The e-copy of user manual can be sent by e-mail on requested. For enquiries, please call Shun Hing Electric Works & Engineering Co., Ltd. hotline at 2861 2767.

8. After Sales Service

Shun Hing Electric Works & Engineering Co., Ltd. ("The Company") authorizes Shun Hing Electric Service Centre Ltd. ("SHESC") (collectively "Shun Hing") to offer one year warranty service to the product commencing from the date of purchase invoice. Services beyond the said warranty period will be charges according to the standard service charge price list from SHESC. For the warranty details please refer to the warranty card.

1. Shun Hing shall not be liable for any direct or indirect loss or damage to any person or property, howsoever caused arising from improper use, or any stoppage, breakdown or failure of the product.
2. Customer is responsible to deliver the product to our service station and pick up the repaired product from the same location.
3. The warranty card (printed on the packing box) is valid only in Hong Kong and Macau. Customer is required to present the warranty card together with the official purchase invoice issued by the dealers of Hong Kong or Macau or redemption voucher to our technician for verification when service is rendered. The warranty card is valid only if the model number stated herein corresponds with that of the product and the date of purchase stated herein is the same with the date of official purchase invoice. Save and except the specific warranty card, any other warranty card issued by other parties will not be recognized by Shun Hing.
4. Customer shall not alter the serial number of the product. The warranty card is void if the serial number on the product does not match with that shown on the warranty card (if applicable).
5. For any defect which in our judgment is caused under normal use, SHESC will repair or replace the defective parts, excluding any surface, cabinet, consumptive parts and accessories, free of charge within the warranty period. Any defective part which has been replaced shall become the property of SHESC.
6. Warranty service does not cover the following items. Additional charges shall be levied if services are required. (a) Repair or replacement of accessories, cosmetic and consumptive parts including but not limited to external cables, cabinet, control panel, control panel label and etc. (b) The product has been explicitly or implicitly modified, tempered with, altered or repaired in any way by persons other than technicians of SHESC. (c) The product has been damaged through misuse, negligence, power interruption or abnormal voltage input, accident, natural calamities, or due to ingress of insects, foreign matters or liquid, corrosion or external factors. (d) The normal operation of the product is affected by improper installation of the product.
7. In case there is any inconsistency or conflict between English version and Chinese version of the terms, the Chinese version shall prevail.
8. All terms stated are subject to change without notice. SHESC retains final deciding authority in case of dispute.
9. Nothing in the warranty card confers or purports to confer on any third party any benefit or any right pursuant to the Contracts (Rights of Third Parties) Ordinance (Cap. 623) to enforce any term of the warranty card.



SHUN HING GROUP
信興集團
SINCE 1953

Rasonic 樂信牌

信興電工工程有限公司

SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓909-912室

電話：2861 2767

圖文傳真：2865 6706

網址：<http://www.rasonic.com>

電郵：shew@shunhinggroup.com

Office: Room 909-912,9/F., Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, H.K.

Tel: 2861 2767

Fax: 2865 6706

Website: <http://www.rasonic.com>

E-mail: shew@shunhinggroup.com

保養及維修 Maintenance and Repair Service:

信興電器服務中心有限公司

SHUN HING ELECTRIC SERVICE CENTRE LTD.

香港新界葵涌勝耀街2號信興中心11樓

服務熱線：2406 5666

傳真號碼：2408 0316

網址：<http://www.shesc.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. HK

Service Hotline: 2406 5666

Fax No.: 2408 0316

Website: <http://www.shesc.com/en>

客戶服務中心：

香港新界葵涌勝耀街2號信興中心1樓

九龍佐敦佐敦道23-29號新寶廣場20樓

香港天后琉璃街7號柏景中心22樓

澳門慕拉士大馬路193-199號南嶺工業大廈5樓1座

有關最新之香港及澳門客戶服務中心資料，請參閱信興服務中心網址：www.shesc.com。

Customer Service Centres:

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

20/F, Sino Cheer Plaza, 23-29 Jordan Road, Jordan, Kowloon

22/F, Parkview Centre, 7 Lau Li Street, Tin Hau, Hong Kong

Avenida de Venceslau de Morais, No.193-199, 5 andar - I, Edf. Industrial Nam Leng, Macau

For the latest information of Hong Kong and Macau service center, please visit www.shesc.com.